



Audi RS 4/RS 4 Avant

Quick reference guide



Dear Audi Driver,

This quick reference guide gives you a brief introduction to the main features and controls of your vehicle.

However, it cannot replace the Owner's Manual which contains important information and safety warnings.

We wish you safe and enjoyable motoring with your Audi.

AUDI AG

Locking and unlocking the vehicle

The central locking system locks and unlocks all the doors, the boot lid/tailgate and the tank flap. It can be operated with the remote control or by turning the key in the lock.

Remote control keys

Press the appropriate button for about 1 second.

1 Unlocking button: Open one of the doors within about 60 seconds, otherwise the vehicle will lock itself again automatically.

2 Unlocking button for boot lid/tailgate:

Press the button for at least 1 second.

3 Locking button: The turn signals flash once to confirm that the doors and boot lid/tailgate are properly closed and locked.

4 Folding out the master key:

Press the release button.

Folding in the master key:

Press the button and fold in the key.

Note: Press and hold the unlocking button on the remote control to open all the windows automatically. Press and hold the locking button to close all the windows and the sun roof.

Switch for sliding/tilting sun roof

The ignition must be switched on to open and close the sunroof.

Comfort setting

Turn the control until it engages at position **1**.

To open completely

Turn the control to position **2** and hold it there.

To close

Turn the control until it engages at position **0**.



Anti-theft alarm

The alarm system is automatically **set** when you lock the car, and **switched off** when you unlock the car with the remote control. If you unlock the vehicle by inserting the key in the driver's door, the ignition must be switched on within 15 seconds, otherwise the alarm will be triggered.

⚠ WARNING!

The doors and windows cannot be opened from inside the vehicle if it has been locked from the outside.

To tilt open

Press the control briefly (in position **0**) to make the roof tilt open all the way. Pull the control briefly to close the sun roof.

You can also press or pull the control and hold it (in position **0**) to make the roof move up or down to the desired position.



Filling the tank

Opening the tank flap

Open the tank flap by pressing it in the direction indicated by the arrow. Unscrew the tank cap and hook it onto the flap (see illustration).

Fuel grade

The correct fuel grade for your vehicle is shown on the inside of the tank flap.

Note: The sticker listing the tyre pressures is located on the driver's door pillar.



Safety

Seat belts must be worn on every journey, even on short trips in town. This applies to the front and rear seats. To ensure that the seat belts, belt tensioners and airbags are fully effective, please note the following points:

Wear the seat belt correctly

Make sure that the shoulder section of the belt is positioned over the centre of the shoulder and move the lap section as far down over the hips as possible. The belts should always be worn so that they fit tightly (see illustration).



Adjust seat and sit in correct position

The front seats should not be positioned too close to the steering wheel or dashboard. Maintain a distance of at least 25 cm and sit in a normal upright position. The top of the head restraint should be at eye level or higher. Always keep your feet in the footwell.

Safety of children in the vehicle

Children under 12 should travel on the rear seat. They must be protected by a child restraint system which complies with the European standard ECE-R 44 and is suitable for the child's height and weight. The safest place for the child restraint system is behind the front passenger's seat.

⚠ WARNING!

Please follow the instructions in the Owner's Manual supplied with your Audi and read the instructions provided by the child seat manufacturer.

Adjusting front seats

1 Moving seat backwards or forwards

Lift the lever and move the seat into the desired position. Then release the lever and move the seat further until the catch engages.

2 Inflating and deflating side padding on seat

Press the control upwards or downwards to inflate or deflate the side padding on the seat as desired.

3 Inflating and deflating backrest side padding on seat

Press the control upwards or downwards to inflate or deflate the backrest side padding on the seat as desired.

4 Adjusting seat height

Lift or press the lever repeatedly until the seat reaches the desired height.

5 Adjusting lumbar support

Press the appropriate part of the adjuster control to move the lumbar support to the desired position.

6 Adjusting angle of backrest

Lean forwards and turn adjuster wheel.















Instruments



- ❶ **Coolant temperature gauge**
- ❷ **Rev counter**
- ❸ **Warning and indicator lamps**
- ❹ **Speedometer**
- ❺ **Fuel gauge**
- ❻ **Reset button for trip recorder**
Press the button until the display is reset to zero.
- ❼ **Button for service interval display**
Press the button briefly when the vehicle is stationary and the ignition is switched on. A service reminder appears briefly if a service inspection is due in the near future.
- ❽ **Check button for:**
 - **Activating mileage recorder display and clock**
Press button with ignition switched off.
 - **Calling up driver messages again**
Press button briefly when warning symbol appears.
- ❾ **Setting speed warning 1**
Press button briefly when desired speed is reached.
To cancel: press button for at least 1 second while vehicle is moving.
- ❿ **Display for:**
 - **Driver messages**
 - **Warning symbols and auto-check control**
 - **Radio, CD and telephone**
 - **Navigation system**
 - **Outside temperature**
 - **On-board computer (with two memories)**
 - **Service interval display**
- ⓫ **Adjuster buttons for:**
 - **Instrument lighting**
To adjust, press button **+** or **-**.
 - **Digital clock and date**
Press the **MODE** button until the desired display (e.g. hour) starts to flash. To adjust, press button **+** or **-**.

Warning and indicator lamps

	Emission control system ¹⁾		Turn signals, hazard warning lights
	Airbag system ¹⁾		Electronic Stabilisation Program (ESP)
	Cruise control system		Alternator ¹⁾
	Sport mode		Main beam headlights
	Anti-lock brake system ¹⁾		Engine management ¹⁾
	Seat belt warning lamp		Fault in brake system or handbrake engaged


¹⁾ Should one of these warning symbols or warning lamps light up when driving, please contact a qualified workshop without delay.

Warning symbols and auto-check control

Any faults which may occur are indicated by red or yellow symbols in the instrument cluster display.

⚠ WARNING!	
If one of the red symbols lights up while you are driving, stop the car as soon as it is safe to do so, switch off the engine and refer to the Owner's Manual.	


	Fault in brake system		Engine oil pressure too low
	Fault in cooling system		Tyre pressure too low

Note: On some models a loss of tyre pressure is indicated by the  symbol.

The yellow symbols are not explained in this Quick reference guide, as some symbols are automatically accompanied by a corresponding message, which is shown in the display for about 5 seconds. Please refer to the Owner's Manual for an explanation of the symbols for which no message appears in the display.

Note: If required, you can call up a message again by briefly pressing the **CHECK** button.

Instruments and controls

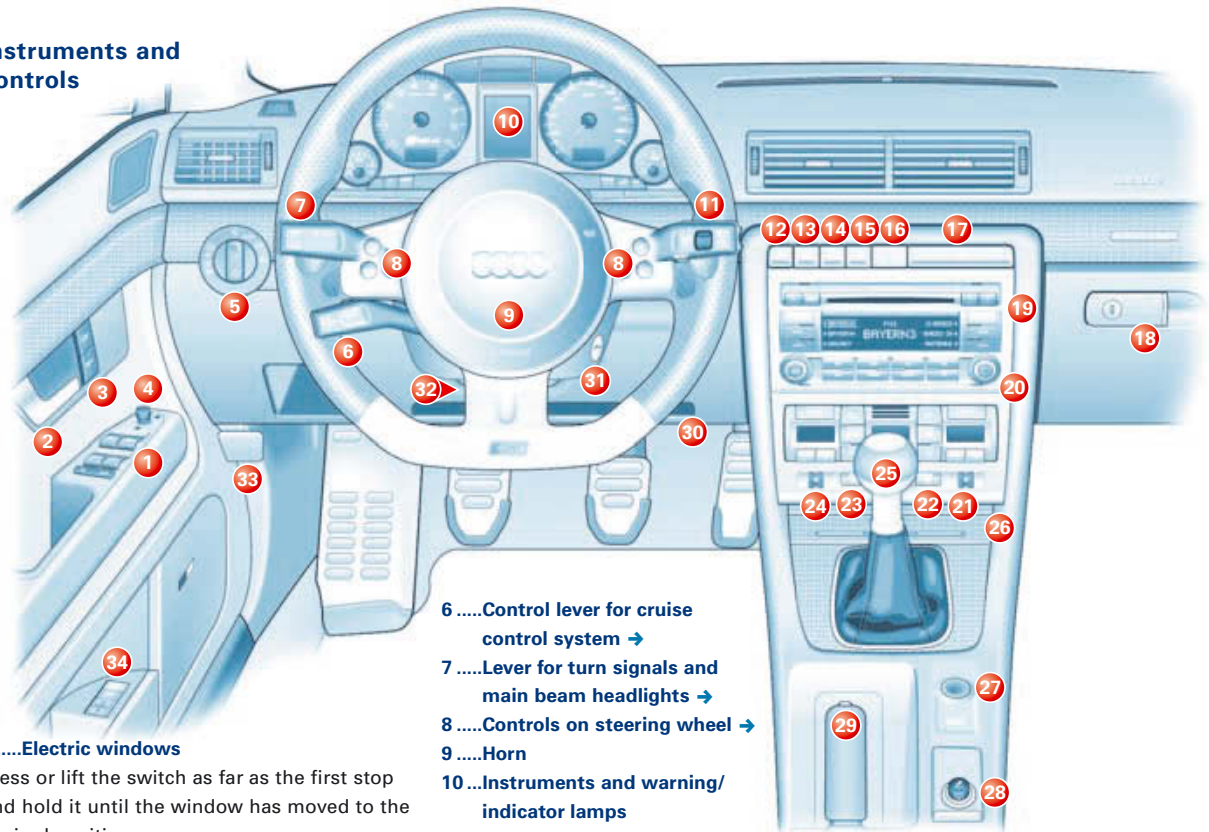

1Electric windows

Press or lift the switch as far as the first stop and hold it until the window has moved to the desired position.

"One-touch" function:

Press/pull the switch briefly to the second stop.

2Door handle

3Central locking switch

Press the appropriate symbol to unlock or lock the vehicle from the inside:

-  To unlock
-  To lock

4Electric adjuster for exterior mirrors

Turn the adjuster to the position for the left or right exterior mirror. Press the adjuster to move the mirror surface in the desired direction.

Note: At low outside temperatures, the mirrors are heated automatically when the rear window heating is switched on.

5Light switch →

6Control lever for cruise control system →

7Lever for turn signals and main beam headlights →

8Controls on steering wheel →

9Horn

10 ...Instruments and warning/indicator lamps

11 ...Control lever for windscreen wipers/washer and on-board computer →

12 ...Switch for Electronic Stabilisation Program (ESP)

13 ...Switch for sun blind (only on saloon)

14 ...Warning lamp for deactivated passenger's airbag

15 ...Switch for acoustic parking system

16 ...Switch for hazard warning lights

17 ...Cup holder

18 ...Glove box

19 ...Navigation System Plus (sound system, navigation, TV/video)

20 ...Switches for air conditioner →

21 ...Thumbwheel for seat heating (front right seat)

22 ...Switch for rear window heating

23 ...Switch for windscreen heating

24 ...Thumbwheel for seat heating (front left seat)

25 ...Gear lever

26 ...Ashtray

27 ...START button →

28 ...Cigarette lighter/socket

29 ...Handbrake

30 ...Service Wallet compartment

31 ...Ignition lock

32 ...Lever for adjustable steering column →

33 ...Bonnet release lever

Please read Owner's Manual.

34 ...Memory buttons for driver's seat

Please read Owner's Manual.

→ Further information for these items is given on the following pages.

[7] Lever for turn signals and main beam headlights

- 1 Right turn signals (with ignition off: right parking light on)
- 2 Left turn signals (with ignition off: left parking light on)
- 3 Main beam headlights
- 4 Headlight flasher



[6] Control lever for cruise control system

Please refer to the Owner's Manual for operating instructions.

[11] Control lever for windscreen wipers/washer and on-board computer

Windscreen:

- 0 Off
- 1 Brief wipe
- 2 To activate intermittent wipe/rain sensor: Move control A to set sensitivity level of rain sensor (wiper delay intervals).
- 3 Slow wiper speed
- 4 Fast wiper speed
- 5 Automatic wash and wipe: Pull lever towards you and hold.

Rear window (only on Avant):

- 6 Intermittent wipe: Push the lever towards the front.
- 7 Automatic wash and wipe: Push the lever towards the front as far as the stop and hold it in this position.

Controls for on-board computer (only on multi-function steering wheel)

Press the top or bottom of rocker switch B repeatedly to display the various computer functions in turn. Press and hold RESET button C to return the current display to zero.

RESET button (only on multi-function steering wheel)

Press RESET button C repeatedly to select the *on-board computer*, the *navigation system* and the *main menu* displays in turn.

[8] Controls on steering wheel


Briefly press the button to switch the sport mode on and off.

Keep pressing the button briefly to access the displays for the *on-board computer*, the *navigation system* and the *main menu* in sequence. Press and hold the button to reset the current value to zero.


Keep pressing the or buttons briefly to display the functions of the on-board computer in sequence. Briefly press the button to activate the selected menu.

Briefly press the , or buttons to deactivate the driving time warning (reminds the driver to take a break).

[5] Light switch

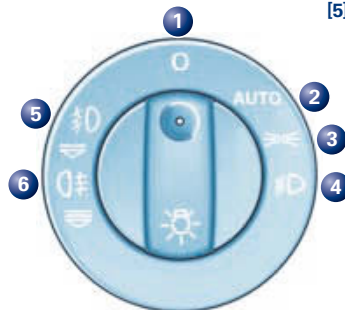

- 1 Off
- 2 AUTO
When the light switch is set to AUTO, the dipped beam headlights will be switched on and off automatically according to the outside light conditions (only on vehicles with a light sensor).
- 3 Side lights
- 4 Dipped beam/main beam headlights
In fog, turn switch to dipped headlights position and then pull out to 1st stop (5 front fog lights) or to 2nd stop (6 front and rear fog lights).

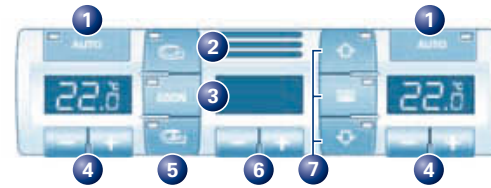

[20] Switches for air conditioner

- 1 **Automatic mode** (driver's side/front passenger's side)
- 2 **Air recirculation** (circulates and filters the air in the interior of the vehicle)
- 3 **ECON mode** (activates/deactivates air cooling)
- 4 **Temperature selection** (driver's side/front passenger's side)
- 5 **Automatic air recirculation**
- 6 **Blower speed**
- 7 **Air flow settings**

Standard setting for all seasons: Select a temperature between 18 °C and 29 °C (60 °F and 84 °F) and press the **AUTO** switch.

Note: The air conditioner settings are stored and assigned to the remote control key. When the vehicle is started again the stored settings will automatically be recalled.

[27] START button

Starting the engine: Switch on the ignition and apply the handbrake. Move the gear lever into the neutral position and fully depress the clutch pedal.

Press the START button and hold it down until the engine starts.

Switching off the engine: Turn the remote control key to position: "ignition off".



[32] Lever for adjustable steering column

Push lever down and adjust position of the steering column as required. Then push the lever back up.