



## Audi A4 Avant

### Quick reference guide

#### Dear Audi Driver,

The aim of this quick reference guide is to introduce you to the main features and controls of your vehicle.

**This quick reference guide cannot replace the information contained in the Owner's Manual; it is therefore important that you also read the notes and warnings in the Owner's Manual.**


We wish you safe and enjoyable motoring with your Audi.

AUDI AG



#### Locking and unlocking the vehicle

The central locking system locks and unlocks all the doors, the boot lid and the tank flap. It can be operated with the remote control or by turning the key in the lock.

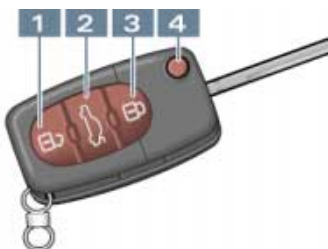

##### Operating the radio-activated remote control

Press the appropriate button for about 1 second.

##### 1 Unlocking button

Open one of the doors or the boot lid within about 60 seconds, otherwise the vehicle will lock itself again automatically.

##### 2 Unlocking button for boot lid

Press the button for at least 1 second.

##### 3 Locking button

The turn signals will flash briefly when the car is locked to confirm that the doors and the boot lid are closed properly.

##### 4 Folding out the master key

Press the release button.

**Folding away the master key**  
Press the button and fold the key away.

**Note:** Press and hold unlocking button on remote control (or turn and hold key in lock on driver's door) to open all the windows. Press and hold locking button on remote control (or

turn and hold key in lock on driver's door) to close all the windows and the sun roof.

**Warning:** The doors and windows cannot be opened from inside the vehicle if it has been locked from the outside.

##### Anti-theft alarm

The alarm system is automatically **set** when the car is locked. The alarm system is **switched off** automatically when you unlock the vehicle with the remote control.

**Note:** If you unlock the vehicle by inserting the key in the driver's door, the ignition must be switched on within 15 seconds, otherwise the alarm will be triggered. If you unlock the boot lid by turning the key in the slot, the alarm will be triggered **immediately**.

#### Adjusting front seats

##### 1 Adjusting head restraints

**Raising head restraint:** Take hold of the sides of the head restraint with both hands and move it up as required.

**Lowering head restraint:** Press the button on the side of the head restraint and move the head restraint as required.

##### 2 Adjusting angle of backrest (manual adjustment)

Lean forwards and turn adjuster wheel.

**3 Adjusting lumbar support**  
Press the appropriate part of the adjuster control to move the lumbar support to the desired position.

##### 4 Adjusting seat height (manual adjustment)

Pull the lever up to raise the seat; press it down to lower the seat.


##### 5 Moving seat backwards or forwards (manual adjustment)

Lift the handle and move the seat.

##### 6 Adjusting angle of backrest (electrical adjustment)

Press the switch in the appropriate direction:

Backrest further upright/  
further reclined

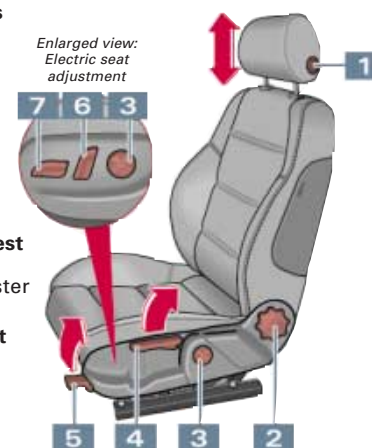

##### 7 Adjusting seat height and moving seat backwards or forwards (electrical adjustment)

Press the switch in the appropriate direction:

- Raises/lowers the seat at the front
- Raises/lowers the seat at the rear
- Raises/lowers the whole seat
- Moves seat forward/back

##### Adjusting belt height

Slide the guide up or down. Tug the belt to check that the catch is engaged properly.



#### Sun roof



##### Opening and closing

Turn the control to 1 to slide open the sun roof and turn it to 0 to close it (the ignition must be switched on).

##### Comfort setting

Turn the control until it engages at position 2.

##### To tilt open

Press the control **briefly** at position 0 to tilt the roof all the way up. Pull the control briefly to close.

**Press and hold** the control to move the roof up to an intermediate position. **Pull and hold** the control to move the roof down.



## Safety

Seat belts must be worn on every journey, even on short trips in town. This applies to the front and rear seats. To ensure that the seat belts, belt tensioners and airbags are fully effective, note the following points:



### Wear the seat belt correctly

Make sure that the shoulder section of the belt is positioned over the centre of the shoulder, and move the lap section as far down over the hips as possible. The belts should always be worn so that they fit tightly (see illustration).

### Adjust seat and sit in correct position

The front seats should not be positioned too close to the steering wheel or dashboard. Maintain a distance of at least 25 cm from the steering wheel. It is important to sit in a normal, upright position and set the backrest so it is fully against your back. The top of the head restraint should be at eye level (or higher). Put your feet in a comfortable position in the footwell.

### Safety of children in the vehicle



Category 0

Category 1

Category 2

Children under 12 should travel on the rear seat. They must be protected by a child restraint system which complies with the European standard ECE R 44 and is suitable for the child's weight and height. The safest place for the child restraint system is behind the front passenger's seat. Make sure that the system is properly secured. The retractor mechanism of the seat belts can be locked to secure a child safety seat.

**Category 0 or 0+:** For babies up to about 9 months/10 kg and infants up to about 18 months/13 kg.

**Category 1:** For small children up to about 4 years of age/18 kg.

**Category 2:** For children up to about 7 years/25 kg.

**Category 3:** Children over 7 years of age but less than 1.5 metres tall are best protected by a booster cushion in conjunction with the three-point seat belt.

Please observe the notes in the Audi Owner's Manual and refer to the manufacturer's instructions for the child seat.

## Instruments and warning/indicator lamps



- 1 Coolant temperature gauge
- 2 Rev counter
- 3 Warning and indicator lamps

Fault in engine management system<sup>1)</sup>

Airbag system<sup>1)</sup>

Electronic immobilizer

Cruise control system

Trailer turn signals

Anti-lock brake system<sup>1)</sup>

Seat belt reminder

Turn signals, hazard warning lights

Electronic stability program (ESP)

Alternator<sup>1)</sup>

Main beam headlights

Side lights/headlights

EPC Engine management<sup>1)</sup> or

Glow plugs

(on diesel models)<sup>1)</sup>

Fault in brake system or handbrake engaged

4 Speedometer

5 Fuel gauge

6 Adjuster buttons for:

- Digital clock and date
- Keep pressing the MODE button until the display flashes. Press the "-" and "+" buttons to set.

- Instrument lighting

Press the "-" and "+" buttons to regulate the brightness of the lighting.

7 Digital clock and date

8 Driver information system display

- Warning symbols and auto-check control

OK No faults detected

Fault in brake system

Fault in cooling system

Engine oil pressure too low

If one of the red symbols lights up while you are driving, stop the car, switch off the engine and refer to the Owner's Manual.

Fuel level low

Check engine oil level

Engine oil sensor faulty<sup>1)</sup>

Brake pads worn<sup>1)</sup>

Speed warning 1 or 2 (km/h or mph)

Dynamic headlight range control faulty<sup>1)</sup>

Washer fluid level low

Battery voltage too high or too low<sup>1)</sup>

Bulb failure<sup>1)</sup>

Door or boot lid open

- Radio/telephone information
- Outside temperature
- On-board computer (with 2 separate memories)

km Fuel range

h Driving time

$\frac{l}{100 \text{ km}}$  Average fuel consumption

km/h Average speed

$\frac{l}{100 \text{ km}}$  Instantaneous fuel consumption

- Navigation/telematics information

- Selector lever position (on vehicles with automatic gearbox)

- Service indicator

Shortly before a service is due, the display will briefly show the word **servicel**, together with the number of miles/km until the service is due.

9 Mileage recorder

Top display: trip recorder

Bottom display: total mileage

10 Check button

- To activate mileage recorder display and clock

Press the button when the ignition is switched off.

- To start auto-check procedure

Press the button with the ignition switched on and the vehicle stationary.

- To call up driver information

Press the button briefly if a red symbol lights up or if the bulb monitor detects a bulb failure.

- To set speed warning 1


Press the button briefly when the desired speed is reached. To cancel the speed warning, press the button for at least one second while the vehicle is moving.

11 Service indicator button

Press the button briefly with the ignition switched on and the vehicle stationary.

12 Reset button for trip recorder

## Filling the tank

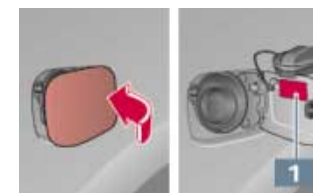

### Opening the tank flap

Open the flap, unscrew the tank cap by turning anti-clockwise and hook onto the flap (see illustration).

Sticker for:


1 Fuel grade

Note: The sticker listing the tyre pressures is located on the passenger's door pillar.

© 2002 AUDI AG

AUDI AG reserves the right to alter any part of the vehicle, its equipment and technical specifications. No legal commitment can be implied by the information, illustrations or descriptions in this publication. No part of this publication may be reprinted, reproduced or translated without the written permission of AUDI AG. All rights under the laws of copyright are expressly reserved by AUDI AG. Subject to change. Printed in Germany. Concept and layout: Pfiemer Kataloge GmbH.

<sup>1)</sup> If one of these warning symbols lights up while you are driving, please take the vehicle to an Audi workshop straightaway.

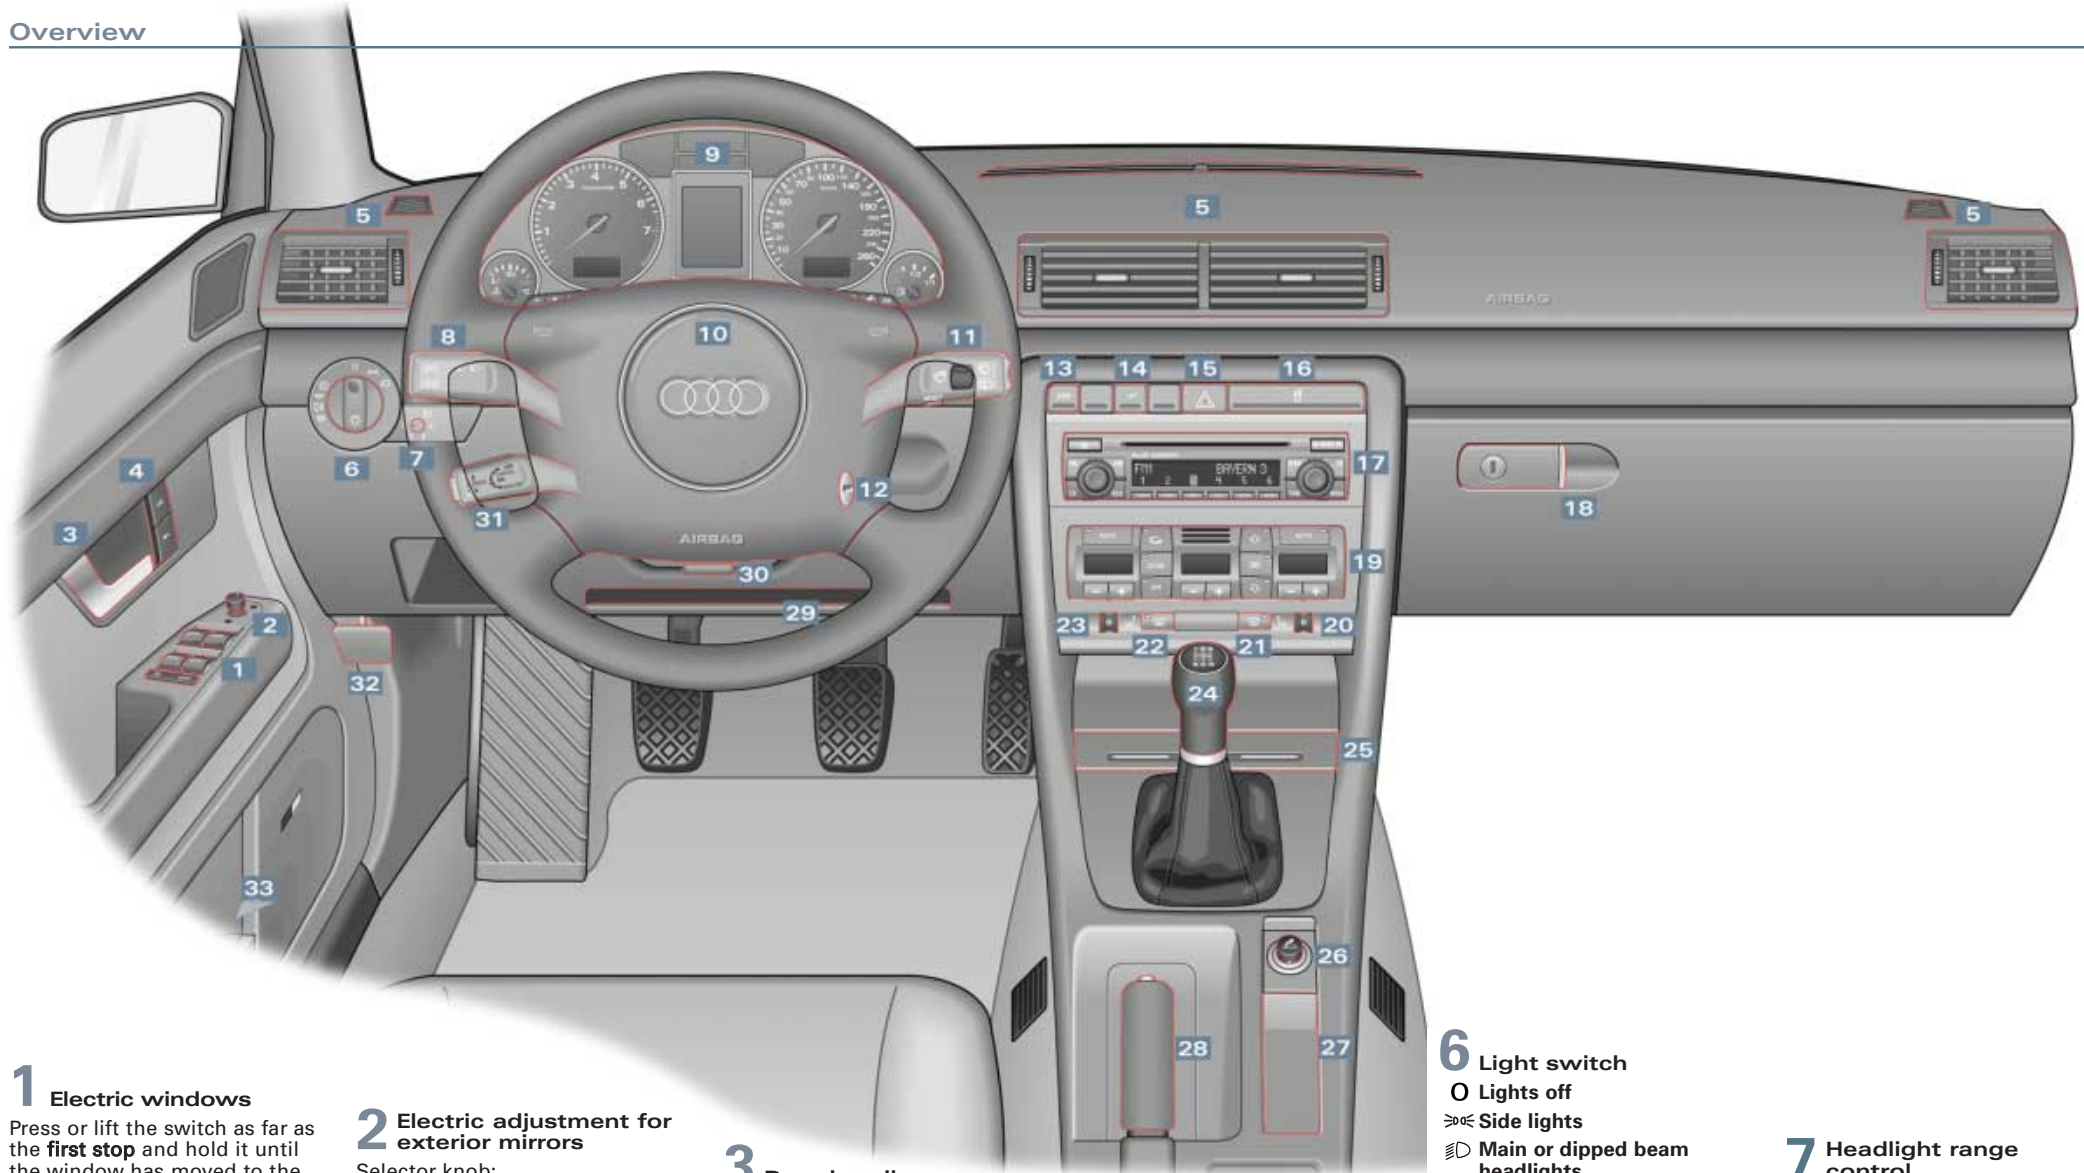

### 1 Electric windows

Press or lift the switch as far as the **first stop** and hold it until the window has moved to the desired position.

#### "One-touch" function

Press or lift the switch as far as the **second stop**; the window will automatically open or close all the way.

*Note:* You can use the **safety switch** to disable the window switches in the rear doors.

### 2 Electric adjustment for exterior mirrors

Selector knob:

☐ Left exterior mirror  
| Off

☐ Right exterior mirror  
☐ Retract both exterior mirrors

Press the adjuster to move the mirror surface in the desired direction. The mirrors are heated when the ignition is on.

### 3 Door handle

### 4 Central locking switch

Press the appropriate side of the switch to lock or unlock the vehicle centrally from the inside:

☐ unlocked  
● locked

### 6 Light switch

○ Lights off  
☞ Side lights  
☞ Main or dipped beam headlights

Turn switch to dipped beam position. Then pull out to

#### 1st stop:

☞ Front fog lights

#### 2nd stop:

☞ Front fog lights and  
☞ Rear fog light

### 7 Headlight range control

Press the knob lightly and turn to the required setting:


0 Front seats occupied

1 All seats occupied

2 All seats occupied, luggage compartment loaded

3 Driver only, luggage compartment loaded

**8** Light switch; turn signal and headlight dip lever

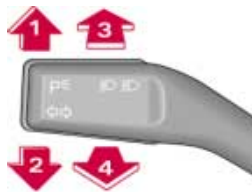

**1** Right turn signals  
(With ignition off:  
right parking light on)

**2** Left turn signals  
(With ignition off:  
left parking light on)

**3** Main beam headlights


**4** Headlight flasher

**9** Instruments and warning/indicator lamps

See also overleaf.

**10** Horn

**11** Windscreen wiper and washer lever

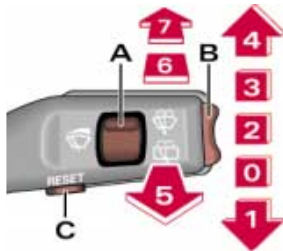

**Windscreen:**

**0** Off

**1** Brief wipe

**2** Intermittent wipe

Move control **A** to alter the wiper intervals.

**3** Slow wiper speed

**4** Fast wiper speed

**5** Automatic wash and wipe  
Pull lever towards you and hold.

**Rear window:**

**6** Intermittent wipe

Press lever towards dashboard.

**7** Automatic wash and wipe

Press lever as far as it will go towards dashboard and hold.

**Function selector switch for on-board computer**

Press the top or bottom of rocker switch **B** to show the various displays in turn. Press and hold button **C** to reset display to zero.

**Function selector for display modes**

Press button **C** repeatedly to select the following displays: on-board computer (single journey memory and total journey memory), navigation system and telematics, or to switch the display off.

**12** Ignition lock

**13** Switch for ESP  
(electronic stability program)

**14** Switch for acoustic parking aid

The parking aid is automatically activated when reverse gear is engaged. Press the switch to activate the parking aid manually if you are driving forwards into a tight space.

**15** Switch for hazard warning lights

**16** Cup holder

Press the symbol to use the cup holder.

**17** Radio or navigation system

**18** Lockable glove box

**19** Air conditioner controls

- + **Temperature selection for left and right sides of vehicle**  
(buttons on left and right)

- + **Blower speed**  
(buttons in centre)

**AUTO** Automatic mode

**Standard setting for all seasons:**  
Select a temperature between 18 °C and 29 °C and switch the automatic mode on.

**20** Thumbwheel for seat heating (front right seat)

**21** Switch for rear window heater

**22** Switch for defrosting windscreen

**23** Thumbwheel for seat heating (front left seat) and steering wheel heating

**24** Gear lever/selector lever

**Selector lever positions on vehicles with automatic gearbox**

**P** - Parking lock

**R** - Reverse gear

**N** - Neutral

**D** - Drive

**S** - Sport  
(not on vehicles with Multi-tronic)

To move the selector lever out of position **P** or **N**, or into position **P** or **R**, press the interlock button on the selector lever handle and the brake pedal simultaneously.

*Note:* Use the foot brake to hold the vehicle when stationary with the engine running (in all selector lever positions other than **P**).

*Warning:* Do not move the selector lever to positions **P** or **R** when the vehicle is moving.

**Manual gear selection (Tiptronic)**

The Tiptronic program enables you to change gear manually. To do this, move the selector lever out of position **D** into the Tiptronic gate on the right. Press the selector lever forwards briefly to shift up a gear, or push the lever back to shift down a gear.

**25** Ashtray

Press front of ashtray to open.

**26** Cigarette lighter/electrical socket

**27** Storage compartment or controls for Driver information system menu

To call up the main menu, press the MENU button when the vehicle is stationary. Turn the pushbutton to move the selector arrow to the option you wish to select, and press the pushbutton to confirm. This activates the submenu. Proceed by turning and pressing the pushbutton until the required function has been performed.

**Navigation system or telematic**  
Please refer to the Operating instructions.

**28** Handbrake

**29** Compartment for Service Wallet

**30** Lever for adjustable steering column



Pull lever down and adjust the position of the steering column as required. Then push the lever back up as far as it will go.

**31** Cruise control system



**Switching on:**  
Press the lever in direction **2**. Then briefly press button **A** to store the current speed in the memory and constantly maintain this speed.

**Adjusting stored speed:**  
Push the lever up (+) or down (-) to increase or decrease the speed you are travelling. The speed will then be stored when you release the lever.


**Switching off temporarily:**  
Press the brake or clutch pedal, or press the lever in direction **1** (without engaging the click stop). To resume the programmed cruising speed, pull the lever in direction **2**.

**Switching off completely:**  
Press the lever in direction **1** (so that the click stop is engaged).

**32** Bonnet release lever  
Please refer to Owner's Manual.

**33** Switches in driver's door compartment

 This switch deactivates the interior monitor for the anti-theft alarm system.

 Deactivating the tow-away monitor