



Audi A4 Cabriolet

Quick reference guide

 
Dear Audi Driver,

The aim of this quick reference guide is to introduce you to the main features and controls of your vehicle.

This quick reference guide cannot replace the information contained in the Owner's Manual; it is therefore important that you also read the notes and warnings in the Owner's Manual.

We wish you safe and enjoyable motoring with your Audi.

AUDI AG

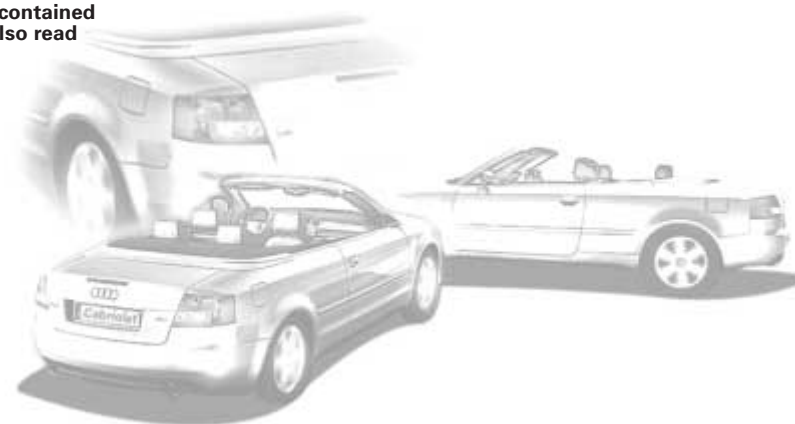

Locking and unlocking the vehicle

The central locking system locks and unlocks all the doors, the boot lid and the tank flap. It can be operated with the remote control or by turning the key in the lock.

Operating the radio-activated remote control

Press the appropriate button for about 1 second.

1 Unlocking button

Open one of the doors or the boot lid within about 60 seconds, otherwise the vehicle will lock itself again automatically.

2 Unlocking button for boot lid

Press the button for at least 1 second.

3 Locking button

The turn signals flash once to confirm that the doors and tailgate/boot lid are properly closed.

 
4 Folding out the master key

Press the release button.

Folding away the master key

Press the button and fold the key away.

Warning: The doors and windows cannot be opened from

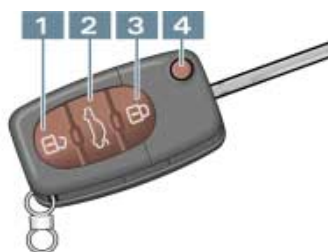

inside the vehicle if it has been locked from the outside.

Anti-theft alarm

The alarm system is automatically **set** when the car is locked. The alarm system is **switched off** automatically when you unlock the vehicle with the remote control.

Note: If you unlock the vehicle by inserting the key in the driver's door, the ignition must be switched on within 15 seconds, otherwise the alarm will be triggered. If you unlock the boot lid by turning the key in the slot, the alarm will be triggered **immediately**.

Adjusting front seats

1 Head restraint

To adjust the angle of the head restraint, push it forwards or backwards as desired.

2 Easy Access A

Pull the lever up and tip the backrest forwards.

3 Easy Access B

Push the switch forwards or backwards to move the seat in the desired direction.

4 Adjusting seat height and moving seat backwards or forwards

Press the switch in the appropriate direction:

- Raises/lowers the seat at the front
- Raises/lowers the seat at the rear
- Raises/lowers the whole seat
- Moves seat forward/back

5 Backrest and head restraint height adjustment

Press the switch in the appropriate direction:



Enlarged view:
Electric seat
adjustment

- Backrest further upright or reclined
- Head restraint higher or lower

6 Adjusting lumbar support

Press the appropriate part of the adjuster control to move the lumbar support to the desired position.



Safety

Seat belts must be worn on every journey, even on short trips in town. This applies to the front and rear seats. To ensure that the seat belts, belt tensioners and airbags are fully effective, note the following points:

Adjust seat and sit in correct position

The front seats should not be positioned too close to the steering wheel or dashboard. Maintain a distance of at least 25 cm from the steering wheel. It is important to sit in a normal, upright position and set the backrest so it is fully against your back. The top of the head restraint should be at eye level (or higher). Put your feet in a comfortable position in the footwell.



Wear the seat belt correctly

Make sure that the shoulder section of the belt is positioned over the centre of the shoulder, and move the lap section as far down over the hips as possible. The belts should always be worn so that they fit tightly (see illustration).

Safety of children in the vehicle



Children under 12 should travel on the rear seat. They must be protected by a child restraint system which complies with the European standard ECE R 44 and is suitable for the child's weight and height. The safest place for the child restraint system is behind the front passenger's seat. Make sure that the system is properly secured. The retractor mechanism of the seat belts can be locked to secure a child safety seat.

Please observe the notes in the Audi Owner's Manual and refer to the manufacturer's instructions for the child seat.

Category 0 or 0+: For babies up to about 9 months/10 kg and infants up to about 18 months/13 kg.

Category 1: For small children up to about 4 years of age/18 kg.

Category 2: For children up to about 7 years/25 kg.

Category 3: Children over 7 years of age but less than 1.5 metres tall are best protected by a booster cushion in conjunction with the three-point seat belt.

Instruments and warning/indicator lamps



- 1 Coolant temperature gauge
- 2 Rev counter
- 3 Warning and indicator lamps

Fault in engine management system¹⁾

Airbag system¹⁾

Electronic immobilizer

Cruise control system

Trailer turn signals

Anti-lock brake system¹⁾

Seat belt reminder

Soft top operation

Turn signals, hazard warning lights

Electronic stability program (ESP)

Alternator¹⁾

Main beam headlights

Side lights/headlights

EPC Engine management¹⁾

Fault in brake system or handbrake engaged

4 Speedometer

5 Fuel gauge

6 Adjuster buttons for:

• **Digital clock and date**
Keep pressing the MODE button until the display flashes. Press the "-" and "+" buttons to set.

• **Instrument lighting**
Press the "-" and "+" buttons to regulate the brightness of the lighting.

7 Digital clock and date

8 Driver information system display

• **Warning symbols and auto-check control**

OK No faults detected

Fault in brake system

Fault in cooling system

Engine oil pressure too low

If one of the red symbols lights up while you are driving, stop the car, switch off the engine and refer to the Owner's Manual.

Fuel level low

Check engine oil level

Engine oil sensor faulty¹⁾

Brake pads worn¹⁾

Speed warning 1 or 2 (km/h or mph)

Dynamic headlight range control faulty¹⁾

Washer fluid level low

Battery voltage too high or too low¹⁾

Bulb failure¹⁾

Door or boot lid open

- Radio/telephone information
- Outside temperature
- On-board computer (with 2 separate memories)

km Fuel range

h Driving time

$\frac{\text{L}}{100 \text{ km}}$ Average fuel consumption

okm/h Average speed

l/100 km Instantaneous fuel consumption

• **Navigation/telematics information**

• **Selector lever position (on vehicles with automatic gearbox)**

• **Service indicator**

Shortly before a service is required, the word **Service** will show in the display, along with the number of km/miles and number of days until the service is due.

9 Mileage recorder

Top display: trip recorder

Bottom display: total mileage

10 Check button

• **To activate mileage recorder display and clock**

Press the button when the ignition is switched off.

• **To start auto-check procedure**

Press the button with the ignition switched on and the vehicle stationary.

• **To call up driver information**

Press the button briefly if a red symbol lights up or if the bulb monitor detects a bulb failure.

• **To set speed warning 1**

 
Press the button briefly when the desired speed is reached. To cancel the speed warning, press the button for at least one second while the vehicle is moving.

11 Service indicator button

Press the button briefly with the ignition switched on and the vehicle stationary.

12 Reset button for trip recorder

Filling the tank

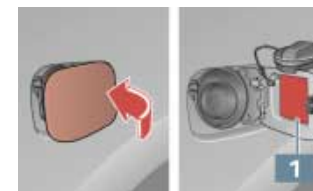

Opening the tank flap

 
Open the flap as illustrated (the vehicle must be unlocked). Unscrew the tank cap and hook it onto the flap. The correct fuel grade is shown on the inner side of the fuel tank flap 1.

Note: the sticker listing the tyre inflation pressures is located on the passenger's door pillar.

© 2002 AUDI AG

AUDI AG reserves the right to alter any part of the vehicle, its equipment and technical specifications. No legal commitment can be implied by the information, illustrations or descriptions in this publication. No part of this publication may be reprinted, reproduced or translated without the written permission of AUDI AG. All rights under the laws of copyright are expressly reserved by AUDI AG. Subject to change. Printed in Germany. Concept and layout: Pfiemer Kataloge GmbH.

¹⁾ Should one of these warning symbols light up while driving, please contact a specialist workshop as soon as possible.

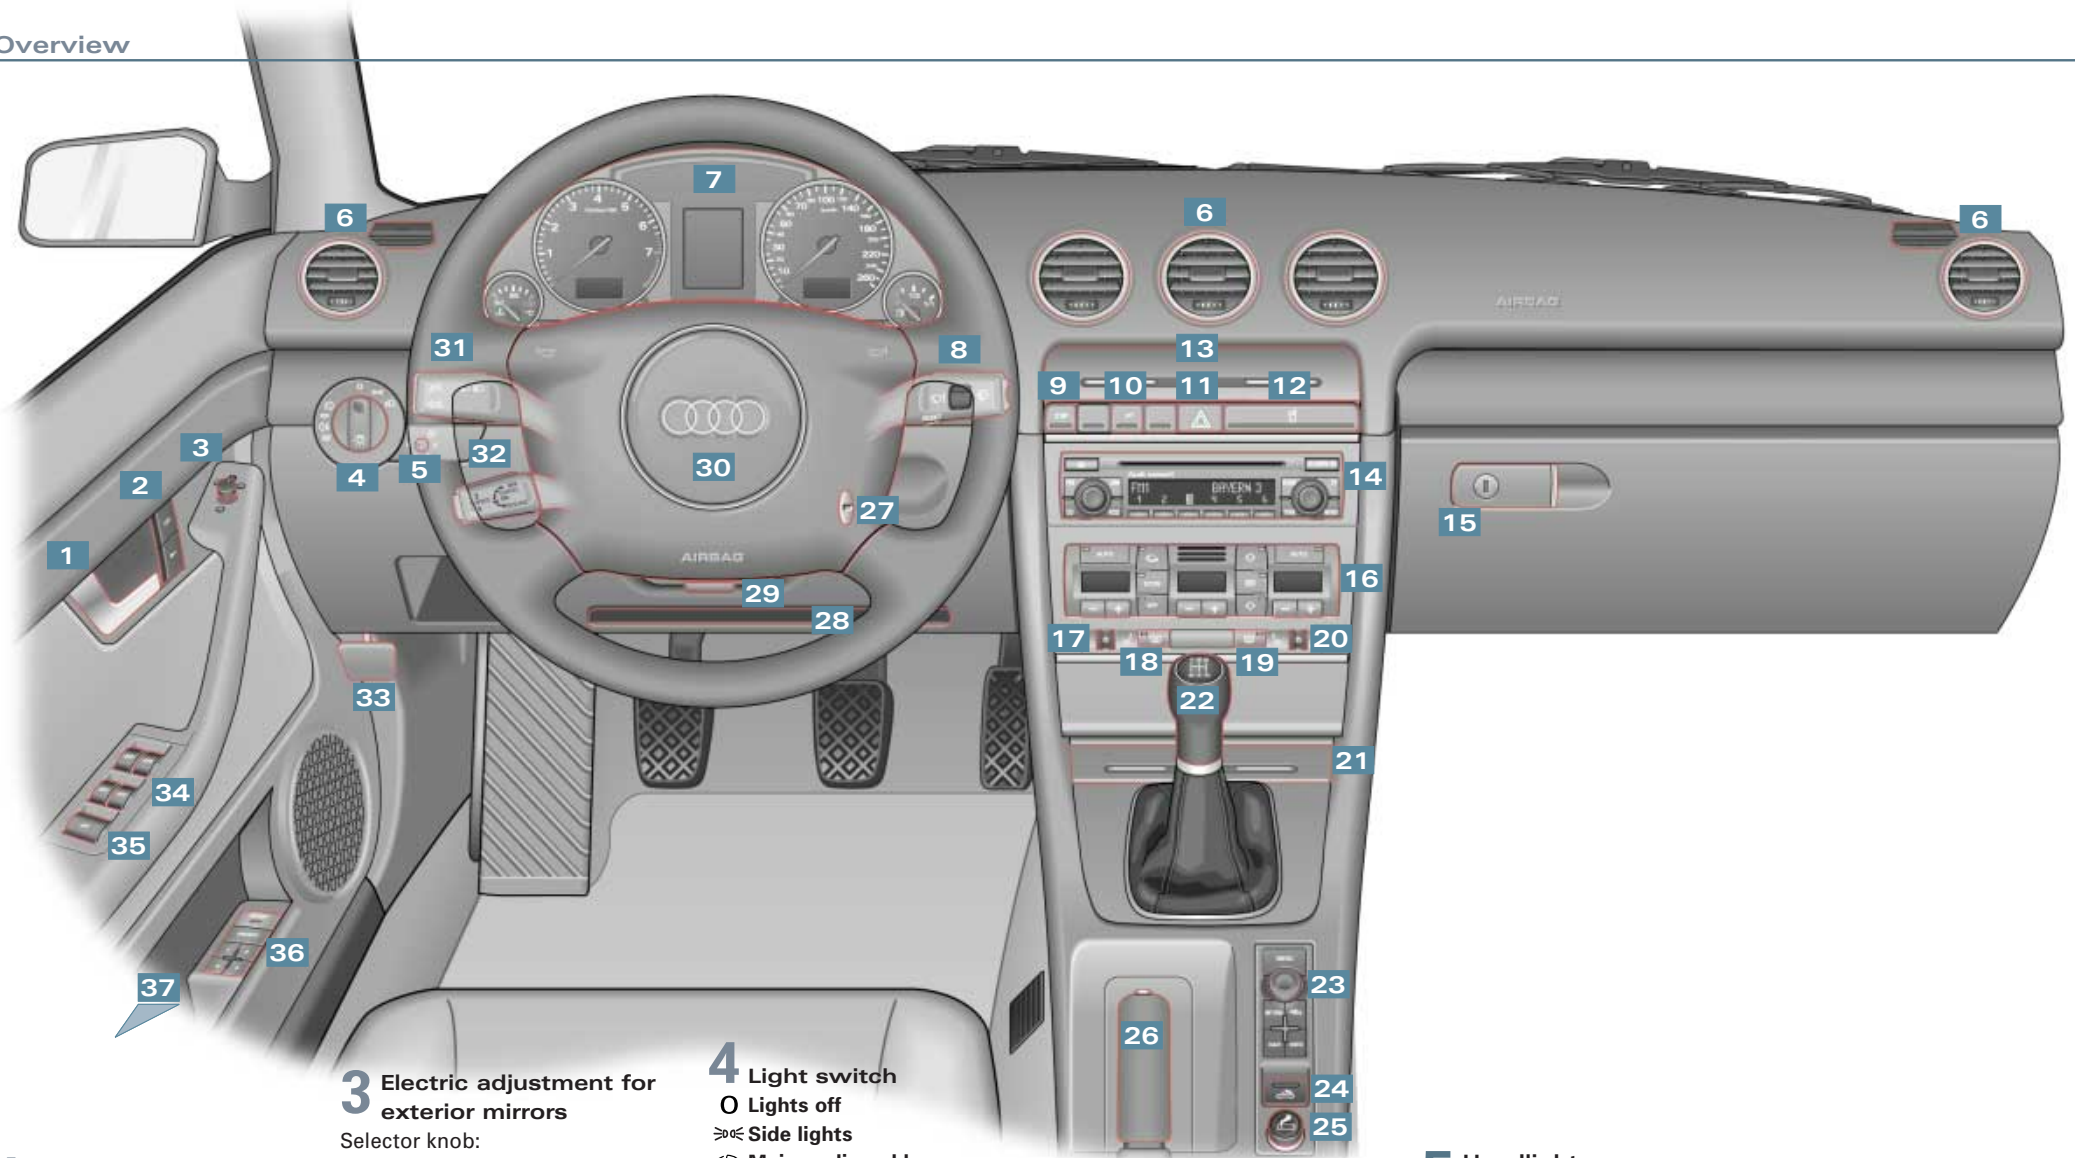

1 Door handle

2 Central locking switch

Press the appropriate side of the switch to lock or unlock the vehicle centrally from the inside:

- unlocked
- locked

3 Electric adjustment for exterior mirrors

Selector knob:

- Left exterior mirror
- Off
- Right exterior mirror
- Retract both exterior mirrors

Press the adjuster to move the mirror surface in the desired direction. The mirrors are heated automatically at low outside temperatures when the ignition is switched on.

4 Light switch

- Lights off
- Side lights
- Main or dipped beam headlights

Turn switch to dipped beam position. Then pull out to

- 1st stop:**
- Front fog lights
- 2nd stop:**
- Front fog lights and Rear fog light

5 Headlight range control

Press the knob lightly and turn to the required setting:

 
- 0** Front seats occupied
- 1** All seats occupied
- 2** All seats occupied, luggage compartment loaded
- 3** Driver only, luggage compartment loaded

6 Air outlets with thumbwheels

7 Instruments and warning/indicator lamps

See also overleaf.

8 Windscreen wiper and washer lever

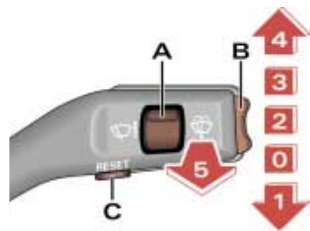

Windscreen:

- 0 Off
 - 1 Brief wipe
 - 2 Intermittent wipe
Move control **A** to alter the wiper intervals.
 - 3 Slow wiper speed
 - 4 Fast wiper speed
 - 5 Automatic wash and wipe
Pull lever towards you and hold.
- Function selector switch for on-board computer**

Press the top or bottom of rocker switch **B** to show the various displays in turn. Press and hold button **C** to reset display to zero.

Function selector for display modes

Press button **C** repeatedly to select the following displays: on-board computer (single journey memory and total journey memory), navigation system and telematics, or to switch the display off.

9 Switch for ESP (electronic stability program)

10 Switch for acoustic parking aid

The parking aid is automatically activated when reverse gear is engaged. Press the switch to activate the parking aid manually if you are driving forwards into a tight space.

11 Switch for hazard warning lights

12 Cup holder

Press the symbol to use the cup holder.

13 Storage compartment

14 Radio or navigation system

15 Lockable glove box

16 Air conditioner controls

- + Temperature selection for left and right sides of vehicle (buttons on left and right)
- + Blower speed (buttons in centre)

AUTO Automatic mode

Standard setting for all seasons:

Select a temperature between 18 °C and 29 °C and switch the automatic mode on.

17 Thumbwheel for seat heating (front left seat) or seat heating combined with steering wheel heating

18 Switch for defrosting windscreen

19 Switch for rear window heater

20 Thumbwheel for seat heating (front right seat)

21 Ashtray

Press front of ashtray to open.

22 Gear lever/selector lever

Selector lever positions on vehicles with automatic gearbox

P - Parking lock

R - Reverse gear

N - Neutral

D - Drive

To move the selector lever out of position **P** or **N**, or into position **P** or **R**, press the interlock button on the selector lever handle and the brake pedal simultaneously.

Note: Use the foot brake to hold the vehicle when stationary with the engine running (in all selector lever positions other than **P**).

Warning: Do not move the selector lever to positions **P** or **R** when the vehicle is moving.

Manual gear selection (Tiptronic)


The Tiptronic program enables you to change gear manually. To do this, move the selector lever out of position **D** into the Tiptronic gate on the right. Press the selector lever forwards briefly to shift up a gear, or push the lever back to shift down a gear.

23 Storage compartment or switches for navigation system or telematics

 
Please read the Owner's Manual!

24 Switch for opening and closing the soft top

Opening the soft top

To open the soft top, pull up the switch  for the soft top until the operation is completely finished.

Closing the soft top

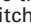To close the soft top, press down the switch  for the soft top until the operation is completely finished.

Note: If the switch is released while the soft top is opening or closing, the operation will be stopped. The warning lamp in the instrument cluster will go out when the soft top is completely opened or closed. Opening and closing of the soft top is only possible when the ignition is switched on.

Please refer to the Owner's Manual for instructions on manual opening and closing.

25 Cigarette lighter/electrical socket

26 Handbrake

27 Ignition lock

28 Compartment for Service Wallet

 
29 Lever for adjustable steering column



Pull lever down and adjust the position of the steering column as required. Then push the lever back up as far as it will go.

30 Horn

31 Light switch; turn signal and headlight dip lever

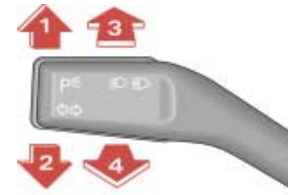

1 Right turn signals

(With ignition off: right parking light on)

2 Left turn signals

(With ignition off: left parking light on)

3 Main beam headlights

4 Headlight flasher

32 Cruise control system



Switching on:

Press the lever in direction **2**. Then briefly press button **A** to store the current speed in the memory and constantly maintain this speed.

Adjusting stored speed:

Push the lever up (+) or down (-) to increase or decrease the speed you are travelling. The speed will then be stored when you release the lever.

Switching off temporarily:

Press the brake or clutch pedal, or press the lever in direction **1** (without engaging the click stop). To resume the programmed cruising speed, pull the lever in direction **2**.

Switching off completely:

Press the lever in direction **1** (so that the click stop is engaged).

33 Bonnet release lever

Please refer to Owner's Manual.

34 Electric windows

Press or lift the switch as far as the **first stop** and hold it until the window has moved to the desired position.

"One-touch" function

Press or lift the switch as far as the **second stop**; the window will automatically open or close all the way.

35 Electric window switch for all windows

36 Memory buttons for the driver's seat

37 Switches in driver's door compartment

 This switch deactivates the interior monitor for the anti-theft alarm system.

 Deactivating the tow-away monitor