



Audi TT Roadster

Quick reference guide

Dear Audi Driver,

The aim of this quick reference guide is to introduce you to the main features and controls of your vehicle.

This quick reference guide cannot replace the information contained in the Owner's Manual; it is therefore important that you also read the notes and warnings in the Owner's Manual.

We wish you safe and enjoyable motoring with your new Audi.

AUDI AG



Locking and unlocking the vehicle

The central locking system locks and unlocks the doors. It can be operated with the remote control or by turning the key in the lock.

Operating the radio-activated remote control

Press the appropriate button for about 1 second.

1 Unlocking button

Open one of the doors or the boot lid within about 60 seconds, otherwise the vehicle will lock itself again automatically.

2 Unlocking button for boot lid

Press the button for at least 1 second.

3 Locking button

The turn signals will flash briefly when the car is locked to confirm that doors and boot lid are closed properly.


4 Folding out the master key

Press the release button.

Folding away the master key

Press the button and fold the key away.

Note: Press and hold unlocking button of remote control (or turn and hold key in lock) to open all the windows. Press and hold locking button of remote control (or turn and hold key in lock) to close all the windows.

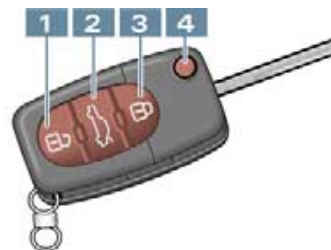

Warning: The doors and windows cannot be opened from inside the vehicle if it has been locked from the outside.

Anti-theft alarm

The alarm system is automatically **set** when the car is locked. The alarm system is **switched off** automatically when you unlock the vehicle with the remote control.

Note: If you unlock the vehicle by inserting the key in the driver's door, the ignition must be switched on within 15 seconds, otherwise the alarm will be triggered.

Adjusting the seats

1 Adjusting head restraints

It is only possible to adjust the angle of the head.

2 Tipping backrest forwards

Lift the handle and tip the backrest forwards.

3 Adjusting angle of backrest


Lean forwards and turn adjuster wheel.

4 Adjusting seat height

Pull the lever up to raise the seat; press it down to lower the seat.

5 Moving seat backwards or forwards

Lift the handle and move the seat.

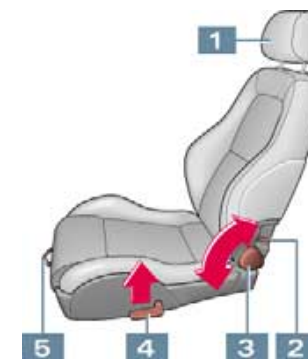

Safety

Seat belts must be worn on every journey, even on short trips in town. To ensure that the seat belts, belt tensioners and airbags are fully effective, note the following points:

Adjust seat and sit in correct position

The front seats should not be positioned too close to the steering wheel or dashboard. Maintain a distance of at least 25 cm from the steering wheel. It is important to sit in a normal, upright position and set the backrest so it is fully against your back. The top of the head restraint should be at eye level (or higher). Put your feet in a comfortable position in the footwell.



Wear the seat belt correctly

Make sure that the shoulder section of the belt is positioned over the centre of the shoulder, and move the lap section as far down over the hips as possible. The belts should always be worn so that they fit tightly (see illustration).

Filling the tank



Releasing the tank flap

Press the switch (with the filler pump symbol) in the centre console to open the tank flap. Then unscrew the tank cap and hook it onto the flap (see illustration).

Stickers for:

- 1 Fuel grade
- 2 Tyre pressures



Instruments and warning/indicator lamps



1 Rev counter

2 Warning and indicator lamps

- EPC Engine management¹⁾
- Side lights/headlights
- Soft top
- Electronic stabilisation programme (ESP)
- Electronic immobilizer
- Main beam headlights
- Turn signals, hazard warning lights
- Fault in engine management system¹⁾
- Airbag system¹⁾
- Anti-lock brake system (ABS)¹⁾
- Handbrake engaged
- Alternator¹⁾
- Seat belt warning

3 Coolant temperature gauge

4 Fuel gauge

5 Speedometer

6 Mileage recorder

Top display/bottom display:
trip recorder/total mileage

7 Reset button for trip recorder

8 Display:

• Warning symbols and auto-check control

- OK No faults
- Fault in brake system**
- Coolant temperature too high/coolant level too low**
- Engine oil pressure too low**
- If one of the red symbols lights up while you are driving, stop the car, switch off the engine and refer to the Owner's Manual.**
- Brake light faulty¹⁾**
- Bulb failure¹⁾**
- Brake pads worn¹⁾**
- Washer fluid level low**
- Fuel level low**
- Battery voltage too high or too low¹⁾**
- Check engine oil level**
- Engine oil sensor faulty¹⁾**
- Speed warning 1 or 2 (km/h or mph)**
- Dynamic headlight range control faulty¹⁾**
- Door/boot lid not shut**

¹⁾ Should one of these warning symbols light up while driving, please contact a specialist workshop as soon as possible.

• On-board computer

- $\frac{l}{100\text{ km}}$ Instantaneous fuel consumption
- km Fuel range
- h Driving time
- $\frac{l}{100\text{ km}}$ average fuel consumption
- okm/h average speed

• Outside temperature

• Selector lever position (on vehicles with automatic gearbox)

• Radio/telephone information

• Navigation information

• Service indicator

Shortly before a service is due, the display will briefly show the word **Service**, together with the number of miles/km until the service is due.

9 Adjuster button for:

- **To set the time/date**
Keep pulling the button briefly until the desired display appears. Turn the button to alter the time/date.

Soft top



For safety reasons, never open or close the soft top while the vehicle is moving. Always fit the cover on the storage box before setting off with the soft top open.

Switch on the ignition and apply the handbrake firmly before opening or closing the soft top.
Note: After opening or closing the soft top, make sure the soft top warning lamp in the dashboard goes out. This indicates that the soft top is properly secured.

• To check distance to next service

Press the button briefly with the ignition on and the vehicle stationary.

• To call up auto-check control displays (in turn)

Press the button twice with the ignition on.

• To call up driver information

Press the button when one of the red symbols flashes.

• To activate mileage recorder display and digital clock

Press the button when the ignition is off.

• To set speed warning 1

Press the button briefly when the desired speed is indicated on the speedometer. To clear the speed limit, press the button for at least 1 second while the vehicle is moving.

10 Digital clock/date display

Releasing soft top

Press the button 1. Take hold of handle 2, turn it anti-clockwise as far as it will go and push it upwards to open the soft top slightly 3. Then push the handle back up into the recess.

Opening soft top

Manually-operated soft top:
Get out of car, take hold of front of soft top 3 and lift it back, guiding it right the way down into storage box.

Power-operated soft top:
Lift the switch in centre console 4 and keep holding until soft top stops moving.



Fitting cover on storage box

Take hold of the cover on one side 5, and lift the cover out of the luggage compartment. Fit cover at rear of storage box and hook strap into place 6. Hold the strap at rear of cover 7 and lower cover down at front, guiding it under top of storage box 8. Then let go of the strap and press the cover into catches on left and right so that it engages firmly 9. Finally, press edges of cover down under top of storage box 10.


Removing cover from storage box

To release cover, press buttons on either side of vehicle 11. Lift cover at front and unhook strap 6. Place cover in luggage compartment with sides folded upwards 5.



© 2002 AUDI AG

AUDI AG reserves the right to alter any part of the vehicle, its equipment and technical specifications. No legal commitment can be implied by the information, illustrations or descriptions in this publication. No part of this publication may be reprinted, reproduced or translated without the written permission of AUDI AG. All rights under the laws of copyright are expressly reserved by AUDI AG. Subject to change. Printed in Germany. Concept and layout: Pflieger Kataloge GmbH.

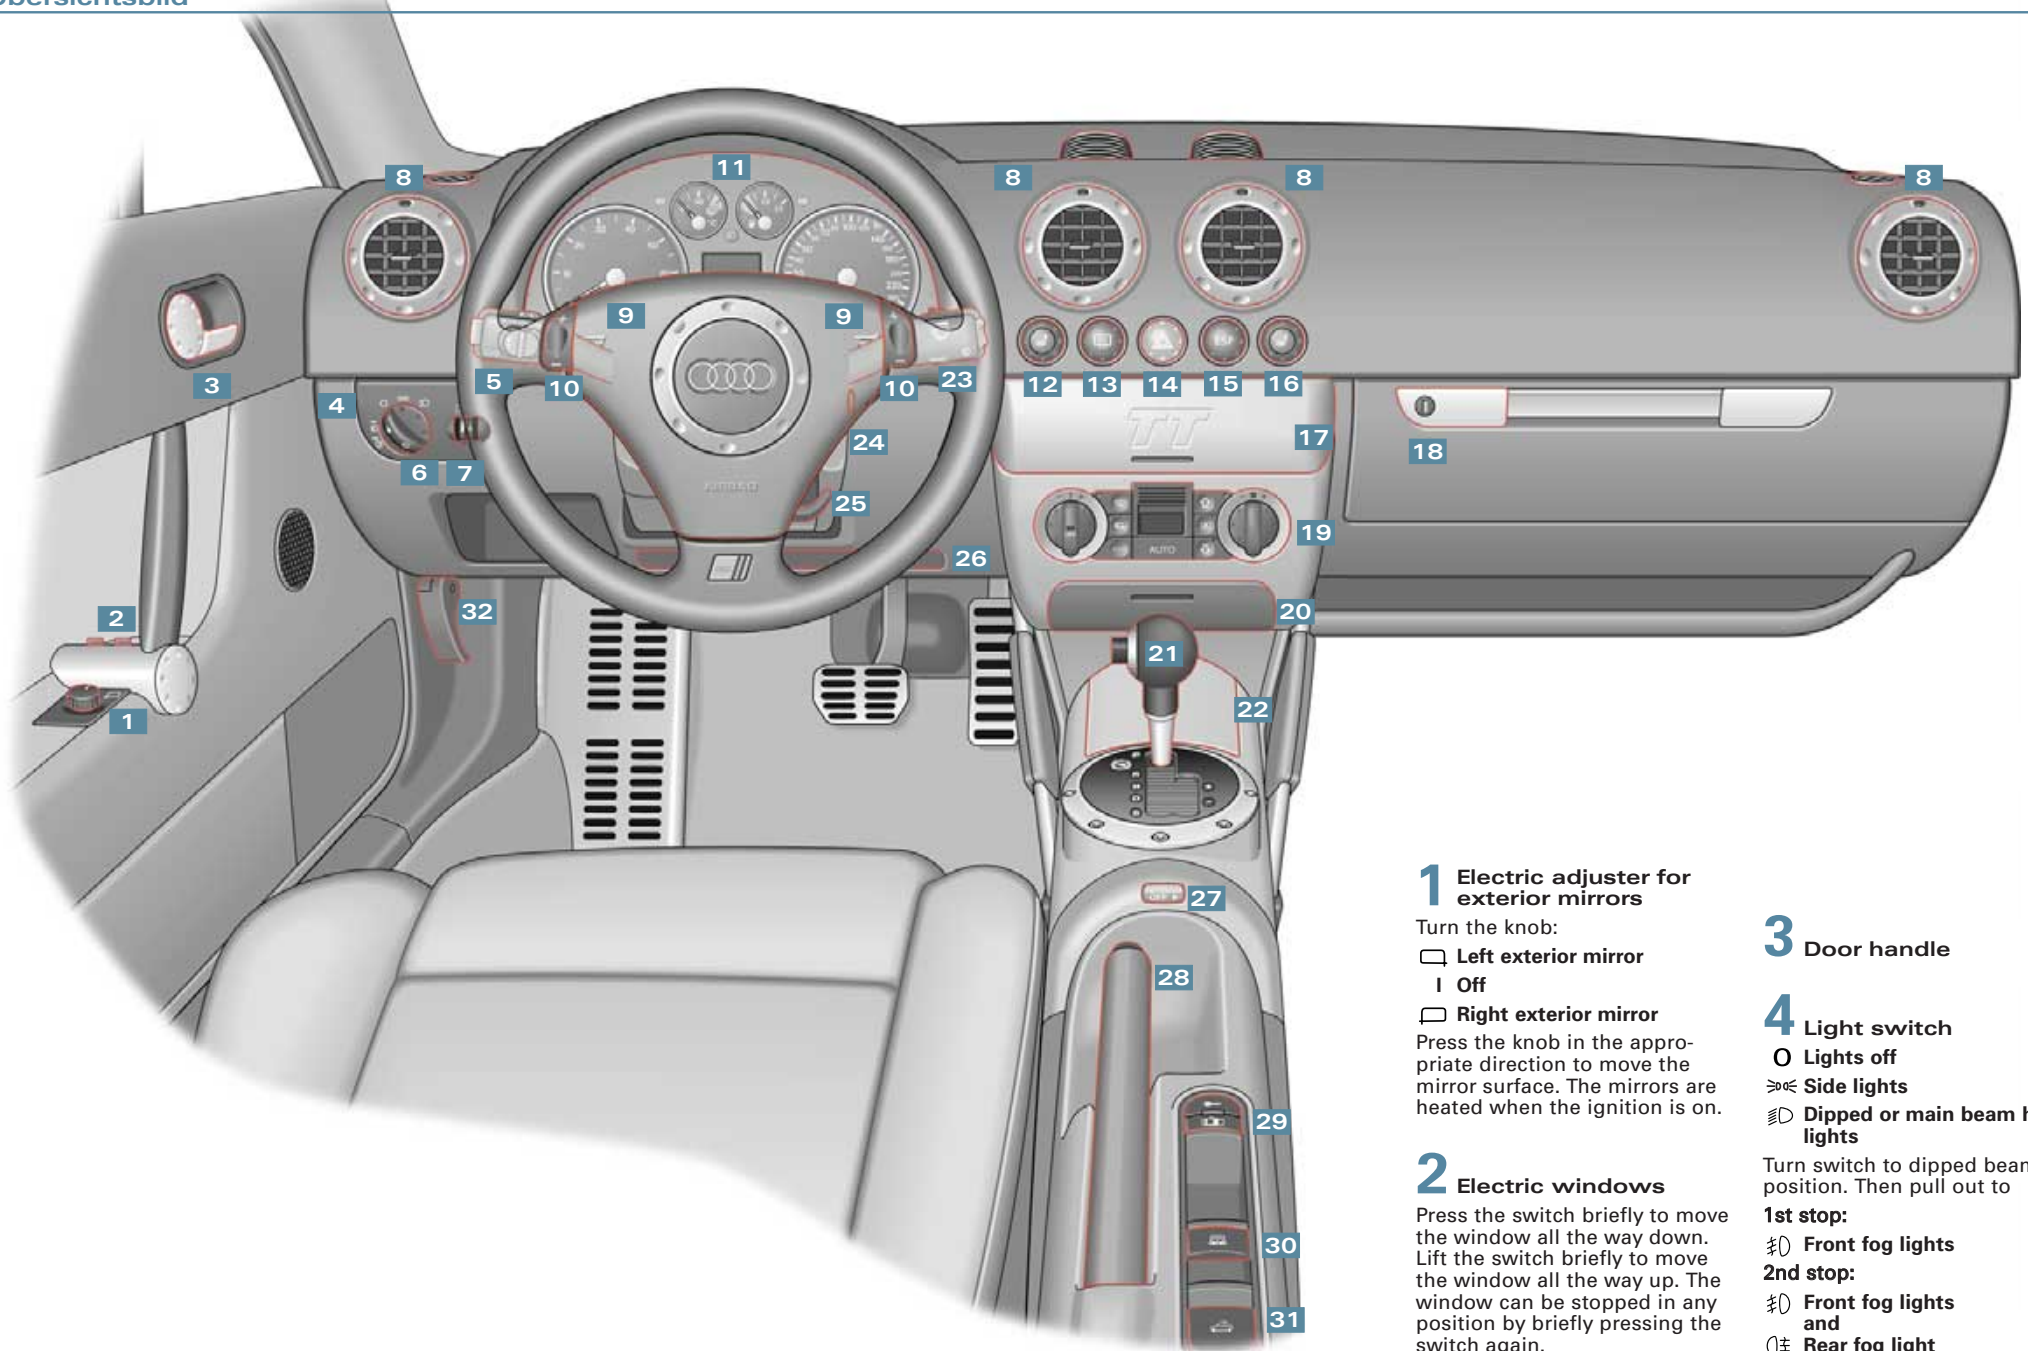

1 Electric adjuster for exterior mirrors

Turn the knob:

☐ Left exterior mirror

| Off

☐ Right exterior mirror

Press the knob in the appropriate direction to move the mirror surface. The mirrors are heated when the ignition is on.

3 Door handle

4 Light switch

○ Lights off

➤☐ Side lights

☐ Dipped or main beam headlights

Turn switch to dipped beam position. Then pull out to

1st stop:

☐ Front fog lights

2nd stop:

☐ Front fog lights and

☐ Rear fog light

2 Electric windows

Press the switch briefly to move the window all the way down. Lift the switch briefly to move the window all the way up. The window can be stopped in any position by briefly pressing the switch again.

5 Light switch; turn signal and headlight dip lever



1 Right turn signals
(With ignition off:
right parking light on)

2 Left turn signals
(With ignition off:
left parking light on)

3 Main beam headlights

4 Headlight flasher

Cruise control system

To activate the system:
slide control **A** to ON/EIN
position. Press button **B** to store
the current speed and maintain
this speed constantly.

To switch off cruise control temporarily:
press either the brake pedal or
clutch pedal, or slide control **A**
to OFF/AUS. To resume the
programmed cruising speed,
slide switch **A** to RES/AUFN.

To switch off cruise control completely:
slide control **A** all the way over
to OFF/AUS until the click stop
engages.

6 Thumbwheel for instrument lighting

7 Thumbwheel for headlight range control

Press the knob lightly and turn
to the required setting:

0 Driver only

I All seats occupied

**II All seats occupied, luggage
compartment loaded**

**III Driver only, luggage
compartment loaded**

8 Air outlets

9 Horn

10 Tiptronic controls on steering wheel for manual gear selection

When the selector lever is in
position **D** or **S**, or in the manual
shift programme, you can shift
up or down to the next gear by
briefly pressing the upper or
lower part of either of the
switches.

11 Instruments and warning/indicator lamps

See also overleaf.

12 Seat heating (front left seat)

Press the knob to switch on.
Turn the knob to adjust the
temperature.

13 Rear window heating

14 Hazard warning lights

15 Switch for ESP (electronic stabilisation programme)

16 Seat heating (front right seat)

Press the knob to switch on.
Turn the knob to adjust the
temperature.

17 Radio cover panel

To open: lightly press lower
edge.

18 Lockable glove box

19 Air conditioner con- trols

**- F + On/off control,
temperature setting**
Press control to switch on;
pull control to switch off.

Defrost windows

AUTO Automatic mode

- S + Blower speed

Standard setting for all seasons:
Select a temperature of 22 °C
and switch on automatic mode.

20 Ashtray with cigarette lighter/ electrical socket

21 Gear lever/selector lever

**Selector lever positions on
vehicles with automatic gearbox**

P - Parking lock

R - Reverse gear

N - Neutral

D - Drive

S - Sport

To move the selector lever out of
position **P** or **N**, or into position
P or **R**, press the interlock button
on the selector lever handle and the
brake pedal simultaneously.

Note: Use the foot brake to hold
the vehicle when stationary with
the engine running (in all selector
lever positions other than **P**).

Warning: Do not move the selec-
tor lever to positions **P** or **R**
when the vehicle is moving.

Manual gear selection (Tiptronic)
The Tiptronic program enables
you to change gear manually.


To do this, move the selector
lever out of position **D** into the
Tiptronic gate on the right. Press
the selector lever forwards
briefly to shift up a gear, or push
the lever back to shift down a
gear.

22 Switch compartment


Slide open lid for access to
switches:

 **Release switch for tank
flap**

 **Release switch for tailgate**

 **Deactivator switch for
interior monitor of alarm
system**

23 Windscreen wiper and washer lever

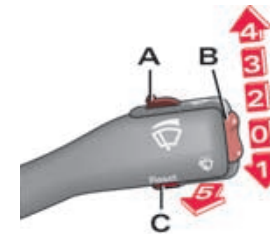

0 Off

1 Brief wipe

2 Intermittent wipe

Move control **A** to alter the wiper
intervals.

3 Slow wiper speed

4 Fast wiper speed

5 Automatic wash and wipe
Pull lever towards you and hold.

**Function selector switch
for on-board computer**

Press the top or bottom of rocker
switch **B** repeatedly to call up
the various displays. Press and
hold button **C** to reset display to
zero.

**Function selector for
display modes**

Press button **C** repeatedly to
select the following displays:
on-board computer and navi-
gation system, or to switch the
display off.

24 Ignition lock

25 Lever for adjustable steering column



Pull lever down and adjust the
position of the steering column
as required. Then push it back
up as far as it will go.

26 Compartment for Service Wallet

27 AIRBAG OFF indicator lamp

The indicator lamp lights
up constantly if the front
passenger's airbag has been
switched off by turning the key
in the switch located in the
glove box.

28 Handbrake

29 Central locking switch

Press the appropriate symbol
to lock or unlock the vehicle cen-
trally from the inside:

 **lock**

 **unlock**

30 Switch for wind deflector

Lift switch to raise wind
deflector, press switch to lower.
Keep holding until deflector
stops moving.

31 Switch for power- operated soft top

See reverse side.

32 Bonnet release lever

Please refer to Owner's Manual.