



1998 Maintenance Schedule

Miles Kilometers	5 8	10 16	15 24	20 32	25 40	30 48	35 56	40 64	45 72	50 80	55 88	60 96	65 104	70 112	75 120	80 128	85 136	90 144	95 152	100 160	105 168
TDI																					
Engine Oil – change	•	•		•		•		•		•		•		•		•		•		•	
Engine Filter – change	•	•		•		•		•		•		•		•		•		•		•	
Water Sep. – drain	•	•		•		•		•		•		•		•		•		•		•	
Timing Belt – check condition	•	•		•		•		•		•		•		•		•		•		•	
Fuel Filter – replace				•				•				•				•				•	
Timing Belt – replace¹												•									
Timing Belt Tensioner – replace***												•									
1.8T																					
Engine Oil – change	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Engine Filter – change	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
V-Belt – replace																	•				
Spark Plugs – replace								•									•				
Timing Belt – check condition								•									•				
Timing Belt – replace																					•
Timing Belt Tensioner – replace																					•
2.0																					
Engine Oil – change	•	•		•		•		•		•		•		•		•		•		•	
Engine Filter – change	•	•		•		•		•		•		•		•		•		•		•	
Spark Plugs – replace				•				•				•				•				•	
Timing Belt – check condition								•								•					
VR6																					
Engine Oil – change	•	•		•		•		•		•		•		•		•		•		•	
Engine Filter – change	•	•		•		•		•		•		•		•		•		•		•	
Spark Plugs – replace																	•				
V6																					
Engine Oil – change	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Engine Filter – change	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Spark Plugs – replace								•									•				
Timing Belt – check condition								•								•					
Timing Belt – replace																					•
Timing Belt Tensioner – replace																					•
All Cars																					
W/W Fluid – check level		•		•		•		•		•		•		•		•		•		•	
Dust Pollen Filter* – replace		•		•		•		•		•		•		•		•		•		•	
Auto-Shift Lock – check		•		•		•		•		•		•		•		•		•		•	
Brake System – check		•		•		•		•		•		•		•		•		•		•	
Wheels – rotate front to rear		•		•		•		•		•		•		•		•		•		•	
Battery – check electrolyte level				•		•		•		•		•		•		•		•		•	
Manual Trans. – check for leaks				•		•		•		•		•		•		•		•		•	
Automatic Trans. – check for leaks				•		•		•		•		•		•		•		•		•	
Tires/Spare – check condition				•		•		•		•		•		•		•		•		•	
Drive Shafts – check boots				•		•		•		•		•		•		•		•		•	
OBD – check DTC memory				•		•		•		•		•		•		•		•		•	
Door Check Straps – lubricate				•		•		•		•		•		•		•		•		•	
During Road Test				•		•		•		•		•		•		•		•		•	
After Road Test				•		•		•		•		•		•		•		•		•	
Air Cleaner** – replace filter								•									•				
Cooling System – check level				•		•		•		•		•		•		•		•		•	
V-Belt – check tension/condition								•								•					
Ribbed Belt – check condition								•								•					
Front Axle – check								•								•					
Check ATF and diff. level								•								•					
Automatic Trans. AFT – replace													•								

*Where applicable **Two years or 40,000 miles ***Recommended; replace once only ¹Recommended
 Brake Fluid – change every 2 years regardless of mileage
 Air Bag System – check for function and damage after 4 years, 8 years and every 2 years thereafter