



2002 Maintenance Schedule

1.8L

| Kilometers Miles | 8 5 | 16 10 | 24 15 | 32 20 | 40 25 | 48 30 | 56 35 | 64 40 | 72 45 | 80 50 | 88 55 | 96 60 | 104 65 | 112 70 | 120 75 | 128 80 | 136 85 | 144 90 | 152 95 | 160 100 | 168 105 |
|--|--------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|------------|------------|
| Engine Oil – change | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● |
| Engine Filter – change | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● |
| Timing Belt – check | | | | | | | | ● | | | | | | | | | | | | ● | |
| Timing Belt – replace | | | | | | | | | | | | | | | | | | | | | ● |
| Timing Belt Tensioner – replace | | | | | | | | | | | | | | | | | | | | | ● |
| V-belt/Ribbed Belt – check | | | | | | | | ● | | | | | | | | | | | ● | | |
| V-belt – replace | | | | | | | | | | | | | | | | | | ● | | | |
| Spark Plugs – replace | | | | | | | | ● | | | | | | | | | | ● | | | |
| Air Cleaner – replace filter | | | | | | | ● | | | | | | | | | | ● | | | | |
| W/W Fluid – check level | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Auto-shift Lock – check operation | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Brake System – check damage/leaks, pad thickness, fluid level | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Wheels – rotate front to rear | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Airbag System – check function/damage* | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Battery – check electrolyte level | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Engine – check for leaks | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Pollen Filter – replace | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Cooling System – check level | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Transmission – check for leaks** | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Tires/Spare – check condition | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Driveshaft – check boots | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| OBD – check DTC memory | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Door Hinge – lube | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Headlights – check and adjust if necessary | | | ● | | | | | ● | | | ● | | | ● | | | ● | | | ● | |
| Exhaust System – check for damage and leaks | | | ● | | | | | ● | | | ● | | | ● | | | ● | | | ● | |
| Sunroof Frame – clean and lubricate | | | ● | | | | | ● | | | ● | | | ● | | | ● | | | ● | |
| Road Test | | ● | | | | | ● | | | ● | | | ● | | | ● | | | ● | | ● |
| Power Steering – check fluid level | | | | | | | | ● | | | | | | | | | ● | | | | |
| Brake Fluid*** | | | | | | | | | ● | | | | | | | | | ● | | | |
| Check ATF and Differential for leaks and level; add if necessary | | | | | | | | | ● | | | | | | | | | ● | | | |
| Front Axle – check dust seals, ball joints, tie rods | | | | | | | | | | ● | | | | | | | | | ● | | |

*Air Bag System – visual check every 12 months regardless of mileage

**Manual Transmission – check level; add if necessary

***Brake Fluid – change every 2 years regardless of mileage



2002 Maintenance Schedule

2.0L

| Kilometers Miles | 8 5 | 16 10 | 24 15 | 32 20 | 40 25 | 48 30 | 56 35 | 64 40 | 72 45 | 80 50 | 88 55 | 96 60 | 104 65 | 112 70 | 120 75 | 128 80 | 136 85 | 144 90 | 152 95 | 160 100 | 168 105 |
|--|--------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|------------|------------|
| Engine Oil – change | ● | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | |
| Engine Filter – change | ● | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | |
| Timing Belt – check | | | | | | | | ● | | | | | | | | | | ● | | | |
| V-belt/Ribbed Belt – check | | | | | | | | ● | | | | | | | | | | ● | | | |
| Spark Plugs – replace | | | | | | | | ● | | | | | | | | | | ● | | | |
| Air Cleaner – replace filter | | | | | | | | ● | | | | | | | | | ● | | | | |
| W/W Fluid – check level | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | |
| Auto-shift Lock – check operation | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Brake System – check damage/leaks, pad thickness, fluid level | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Wheels – rotate front to rear | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Airbag System – check function/damage* | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Battery – check electrolyte level | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Engine – check for leaks | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Pollen Filter – replace | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Cooling System – check level | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Transmission – check for leaks** | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Tires/Spare – check condition | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Driveshaft – check boots | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| OBD – check DTC memory | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Door Hinge – lube | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Headlights – check and adjust if necessary | | | ● | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Exhaust System – check for damage and leaks | | | ● | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Sunroof Frame – clean and lubricate | | | | ● | | | | ● | | | | ● | | | ● | | | ● | | | ● |
| Road Test | | | ● | | | | ● | | | | ● | | | ● | | | ● | | | ● | |
| Power Steering – check fluid level | | | | | ● | | | | ● | | | | ● | | | | ● | | | ● | |
| Brake Fluid*** | | | | | | ● | | | | | | | | | | | ● | | | ● | |
| Check ATF and Differential for leaks and level; add if necessary | | | | | | | ● | | | | | | | | | | ● | | | | |
| Front Axle – check dust seals, ball joints, tie rods | | | | | | | | ● | | | | | | | | | ● | | | | |

*Air Bag System – visual check every 12 months regardless of mileage

**Manual Transmission – check level; add if necessary

***Brake Fluid – change every 2 years regardless of mileage



2002 Maintenance Schedule

TDI

| Kilometers Miles | 8 5 | 16 10 | 24 15 | 32 20 | 40 25 | 48 30 | 56 35 | 64 40 | 72 45 | 80 50 | 88 55 | 96 60 | 104 65 | 112 70 | 120 75 | 128 80 | 136 85 | 144 90 | 152 95 | 160 100 | 168 105 |
|--|--------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|------------|------------|
| Engine Oil – change | ● | ● | | | ● | | | ● | | | ● | | ● | | ● | | ● | | ● | | ● |
| Engine Filter – change | ● | ● | | | ● | | | ● | | | ● | | ● | | ● | | ● | | ● | | ● |
| Timing Belt – check | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | |
| Timing Belt – replace | | | | | | | | | | | | | | | | | | | | ● | |
| Timing Belt Idler – replace | | | | | | | | | | | | | | | | | | | | ● | |
| V-belt/Ribbed Belt – check | | | | | | | | ● | | | | | | | | | | | ● | | |
| Air Cleaner – replace filter | | | | | | | | ● | | | | | | | | | | ● | | | |
| Water Sep – drain (TDI) | ● | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | |
| Fuel Filter – replace (TDI) | | | | ● | | | ● | | | ● | | ● | | | | ● | | | | ● | |
| W/W Fluid – check level | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Auto-shift Lock – check operation | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Brake System – check damage/leaks, pad thickness, fluid level | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Wheels – rotate front to rear | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Airbag System – check function/damage* | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Battery – check electrolyte level | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● |
| Engine – check for leaks | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Pollen Filter – replace | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Cooling System – check level | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Transmission – check for leaks** | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Tires/Spare – check condition | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Driveshaft – check boots | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| OBD – check DTC memory | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Door Hinge – lube | | ● | | | | | ● | | | | ● | | | | ● | | | ● | | | ● |
| Headlights – check and adjust if necessary | | | ● | | | | ● | | | ● | | | ● | | | ● | | ● | | | ● |
| Exhaust System – check for damage and leaks | | | ● | | | | ● | | | ● | | | ● | | | ● | | ● | | | ● |
| Sunroof Frame – clean and lubricate | | | ● | | | | ● | | | ● | | | ● | | | ● | | | ● | | ● |
| Road Test | | ● | | | | | ● | | | ● | | | ● | | | ● | | ● | | | ● |
| Power Steering – check fluid level | | | | | | | ● | | | | | | | | | | ● | | | | |
| Brake Fluid*** | | | | | | | | ● | | | | | | | | | | ● | | | |
| Check ATF and Differential for leaks and level; add if necessary | | | | | | | | ● | | | | | | | | | | ● | | | |
| Front Axle – check dust seals, ball joints, tie rods | | | | | | | | | ● | | | | | | | | | | ● | | |

*Air Bag System – visual check every 12 months regardless of mileage

**Manual Transmission – check level; add if necessary

***Brake Fluid – change every 2 years regardless of mileage



2002 Maintenance Schedule

VR6

| Kilometers Miles | 8 5 | 16 10 | 24 15 | 32 20 | 40 25 | 48 30 | 56 35 | 64 40 | 72 45 | 80 50 | 88 55 | 96 60 | 104 65 | 112 70 | 120 75 | 128 80 | 136 85 | 144 90 | 152 95 | 160 100 | 168 105 |
|--|--------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|------------|------------|
| Engine Oil – change | • | • | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Engine Filter – change | • | • | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| V-belt/Ribbed Belt – check | | | | | | | | • | | | | | | | | | • | | | | |
| Spark Plugs – replace | | | | | | | | • | | | | | | | | | • | | | | |
| Air Cleaner – replace filter | | | | | | | | • | | | | | | | | | • | | | | |
| W/W Fluid – check level | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Auto-shift Lock – check operation | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Brake System – check damage/leaks, pad thickness, fluid level | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Wheels – rotate front to rear | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Airbag System – check function/damage* | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Battery – check electrolyte level | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Engine – check for leaks | | | • | | | | • | | | | | • | | | | | • | | | | • |
| Pollen Filter – replace | | • | | | | | • | | | | | • | | | | | • | | | | • |
| Cooling System – check level | | • | | | | | • | | | | | • | | | | | • | | | | • |
| Transmission – check for leaks** | | • | | | | | • | | | | | • | | | | | • | | | | • |
| Tires/Spare – check condition | | • | | | | | • | | | | | • | | | | | • | | | | • |
| Driveshaft – check boots | | • | | | | | • | | | | | • | | | | | • | | | | • |
| OBD – check DTC memory | | • | | | | | • | | | | | • | | | | | • | | | | • |
| Door Hinge – lube | | • | | | | | • | | | | | • | | | | | • | | | | • |
| Headlights – check and adjust if necessary | | • | | | | | • | | | | | • | | | | | • | | | | • |
| Exhaust System – check for damage and leaks | | • | | | | | • | | | | | • | | | | | • | | | | • |
| Sunroof Frame – clean and lubricate | | • | | | | | • | | | | | • | | | | | • | | | | • |
| Road Test | | • | | | | | • | | | | | • | | | | | • | | | | • |
| Power Steering – check fluid level | | | | | | | | • | | | | | | | | | • | | | | |
| Brake Fluid*** | | | | | | | | • | | | | | | | | | • | | | | |
| Check ATF and Differential for leaks and level; add if necessary**** | | | | | | | | • | | | | | | | | | • | | | | |
| Front Axle – check dust seals, ball joints, tie rods | | | | | | | | • | | | | | | | | | • | | | | |

*Air Bag System – visual check every 12 months regardless of mileage **Manual Transmission – check level; add if necessary

Brake Fluid – change every 2 years regardless of mileage *Change ATF EuroVan only



2002 Maintenance Schedule

2.8L V6

| Kilometers Miles | 8 5 | 16 10 | 24 15 | 32 20 | 40 25 | 48 30 | 56 35 | 64 40 | 72 45 | 80 50 | 88 55 | 96 60 | 104 65 | 112 70 | 120 75 | 128 80 | 136 85 | 144 90 | 152 95 | 160 100 | 168 105 | |
|--|--------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|------------|------------|---|
| Engine Oil – change | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | |
| Engine Filter – change | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | |
| Timing Belt – check | | | | | | | | | ● | | | | | | | | | | | | ● | |
| Timing Belt – replace | | | | | | | | | | | | | | | | | | | | | | ● |
| Timing Belt Tensioner – replace | | | | | | | | | | | | | | | | | | | | | | ● |
| V-belt/Ribbed Belt – check | | | | | | | | | | ● | | | | | | | | | | | | ● |
| Spark Plugs – replace | | | | | | | | | | ● | | | | | | | | | | | | ● |
| Air Cleaner – replace filter | | | | | | | | | | ● | | | | | | | | | | | | ● |
| W/W Fluid – check level | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | |
| Auto-shift Lock – check operation | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | |
| Brake System – check damage/leaks, pad thickness, fluid level | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | |
| Wheels – rotate front to rear | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | |
| Airbag System – check function/damage* | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | |
| Battery – check electrolyte level | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | | ● | |
| Engine – check for leaks | | ● | | | | | | | ● | | | | | | | | | | | | | ● |
| Pollen Filter – replace | | ● | | | | | | ● | | | | | ● | | | | | | | | | ● |
| Cooling System – check level | | ● | | | | | | ● | | | | | ● | | | | | | | | | ● |
| Transmission – check for leaks** | | ● | | | | | | ● | | | | | ● | | | | | | | | | ● |
| Tires/Spare – check condition | | ● | | | | | | ● | | | | | ● | | | | | | | | | ● |
| Driveshaft – check boots | | ● | | | | | | ● | | | | | ● | | | | | | | | | ● |
| OBD – check DTC memory | | ● | | | | | | ● | | | | | ● | | | | | | | | | ● |
| Door Hinge – lube | | ● | | | | | | ● | | | | | ● | | | | | | | | | ● |
| Headlights – check and adjust if necessary | | ● | | | | | | ● | | | | | ● | | | | | | | | | ● |
| Exhaust System – check for damage and leaks | | ● | | | | | | ● | | | | | ● | | | | | | | | | ● |
| Sunroof Frame – clean and lubricate | | ● | | | | | | ● | | | | | ● | | | | | | | | | ● |
| Road Test | | ● | | | | | | ● | | | | | ● | | | | | | | | | ● |
| Power Steering – check fluid level | | | | | | | | | ● | | | | | | | | | | | | | ● |
| Brake Fluid*** | | | | | | | | | ● | | | | | | | | | | | | | ● |
| Check ATF and Differential for leaks and level; add if necessary | | | | | | | | | ● | | | | | | | | | | | | | ● |
| Front Axle – check dust seals, ball joints, tie rods | | | | | | | | | ● | | | | | | | | | | | | | ● |

*Air Bag System – visual check every 12 months regardless of mileage

**Manual Transmission – check level; add if necessary

***Brake Fluid – change every 2 years regardless of mileage

****Change ATF EuroVan only